

REEDGEEK® *Klangbogen*™ (Sound Bow)

The REEDGEEK® *Klangbogen*™ is the latest innovative product offering from REEDGEEK®, Inc. The *Klangbogen*™ instantly increases output and depth of tone of the saxophone while stabilizing the extreme ranges of the horn so it speaks with clarity. This allows the player to achieve a very stable saxophone sound with great forward projection and point (focus) to the sound.



The *Klangbogen* is now available for all saxophone models and Clarinet and employs distinct metallurgical finishes that give various sound responses and feel. This beautifully crafted solid brass bow attaches to either the lyre holder or neck screw and supports the neck tenon region of the instrument, which historically suffers tremendous nodal disturbances.

Please visit reedgeek.com for complete model offerings and to purchase.

Original Three Pin Set *Klangbogen*™ Instructions

To install, loosen existing lyre screw and insert knurled head resonance pin that fits most securely (.140" & .160" diam. included). Adjust vertical position and retighten existing lyre screw. Vertical adjustments of *Klangbogen*™ height and position will offer different playing results.



†If lyre screw is missing, obtain a replacement from your local music store. The pin can be unscrewed and repositioned in any of the three hole placements for varied tone and response. Note: Touching *Klangbogen*™ to saxophone's tenon or body will also vary the response/resonance. When affixing to a soprano saxophone near the bell or models such as Yamaha/Selmer, that have the lyre post positioned on the body, pin **without knurl** is used. This is also applicable with other saxophones with lyres mounted on the body (such as baritone) and where the knurl pins will not fit correctly.

One Piece *Klangbogen*™ Instructions

REEDGEEK®'s one piece *Klangbogen*™ is the latest reed sounds bow designed specifically to fit saxophones that do not have the traditional lyre attachments on the horn, such as Yamaha but **can be used on ALL saxophones by attaching to the current neck screw and positioned accordingly.**

This is applicable for most baritone saxophones and can be affixed to soprano saxophones with detachable necks.

To install, unscrew neck screw and insert into *Klangbogen*™ slot, re-tightening the neck screw securely. While designed to suspend away from the neck tenon, it can also be positioned touching the saxophone body/tenon. Each position will yield a different response and resonance.



Showing an alternate pin position.



High polish brass one-piece.



REEDGEEK® *ClariKlang*:

The *ClariKlang* is the latest reed and bore stabilizer designed to be used with the clarinet. The user will notice that the *ClariKlang* greatly increases the efficiency of their reed by stabilizing the energy transfer through the mouthpiece and barrel of the clarinet. Designed to be used with most standard metal two screw inverted ligatures and inverted fabric/leather ligatures.

